


Cal. 5040.F

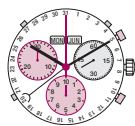


Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
Accuracy: +20 / -10 seconds per month

English User's Manual


In case your watch needs to be repaired or to raise claims under a guarantee, please contact the point of sales



Description of the display and control buttons

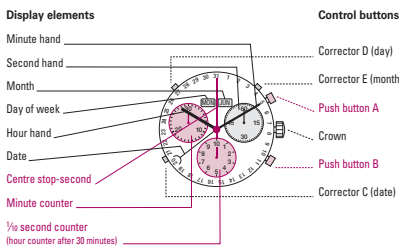

Minute counter Second counter

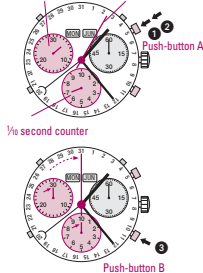

Chronograph: Basic function

(Start / Stop / Reset)

Example:

1 **Start:** Press push-button A.

2 **Stop:** to stop the timing, press push-button A once more and read the 3 chronograph counters:
4 min / 5 sek / 7/10 sec

3 **Zero positioning:** Press push-button B. (The 3 chronograph hands will be reset to their zero positions).

Chronograph: Accumulated timing

Example:

1 **Start:** (start timing)

2 **Stop:** (e.g. 15 min 5 sec following 1)


3 **Restart:** (timing is resumed)

4 **Stop:** (e.g. 13 min 5 sec following 3)
= 28 min 10 sec
(The accumulated measured time is shown)

5 **Reset:** The 3 chronograph hands are returned to their zero positions.

Please note:
Following 4, the accumulation of the timing can be continued by pressing push-button A (Restart / Stop, Restart / Stop, ...)

Minute counter Second counter

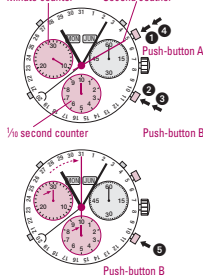

Chronograph: Intermediate or interval timing

Example:

1 **Start:** (start timing)


2 **Display interval:** e.g. 10 minutes 10 seconds (timing continues in the background)

3 **Making up the measured time:** (the 3 chronograph hands are quickly advanced to the ongoing measured time).

4 **Stop:** (Final time is displayed)

5 **Reset:** The 3 chronograph hands are returned to their zero position

Please note:
Following 5, further intervals or intermediates can be displayed by pressing push-button B (display interval / make up measured time, ...)

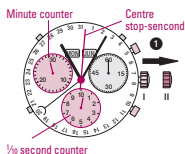

Adjusting the chronograph hands to zero position

Example:

One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

1 Pull out the crown to position II (all 3 chronograph hands are in their correct or incorrect zero position).

2 Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

Adjusting the centre stop second
Single step A 1 x short
Continuous A long


Adjusting the next hand B

Adjusting the 1/2 second counter hand (position 6h)
Single step A 1 x short
Continuous A long

Adjusting the next hand B

Adjusting the minute counter (position 9h)
Single step A 1 x short
Continuous A long

3 Returning the crown to position I
Termination of the chronograph hands adjustment (can be carried out at any time).

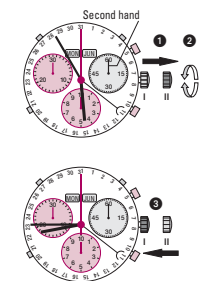


Setting the time

1* Pull out the crown to position II (the watch stops).

2 Turn the crown until you reach the correct time 8.45.

3* Push the crown back into position I.

Please note:
* In order to set the time to the exact second, 1 must be pulled out when the second hand is in position «0» (I).
Once the hour and minute hands have been set, 3 must be pushed back into position I at the exact second.

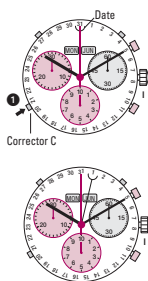

Setting the date (quick mode)

Example after a change of month:

- Date on watch: 31

- Current date: 1

1 Press the corrector C once to adjust the date 1 day forward.

Please note
The date for the following day must be set during the date changing phase between 9:00 PM and 00:20 AM.

Setting the time, date, day of week and month


Example:
- On the watch: 10 (MON) (JAN) 1:25 AM
- Current: 20 (THU) (DEC) 8:30 PM

1* Pull out the crown to position II (the watch stops).

2** Turn crown until the current time is shown.

3* Push crown to position I (watch continues to run).

Please note
* To set your watch to the exact second please refer to the chapter entitled «Setting the time»
** Please observe the AM/PM clock rhythm

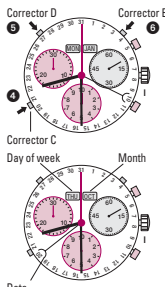

4 Press the corrector C to gradually advance the date hand.

5 Press the corrector D to gradually advance the day of week.

6 Press the corrector E to gradually advance the month.